 


X°Celsius

built to handle any moment

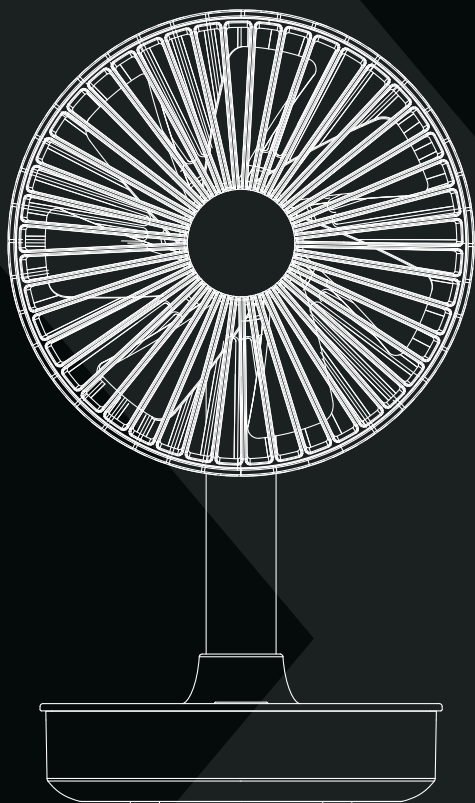

XCelsius® Table Fan

XC-COOL-TF-W1


EN

Quickstart



Scan QR for full manual

This quickstart shows how to use this product.
Scan the QR code for the complete manual.

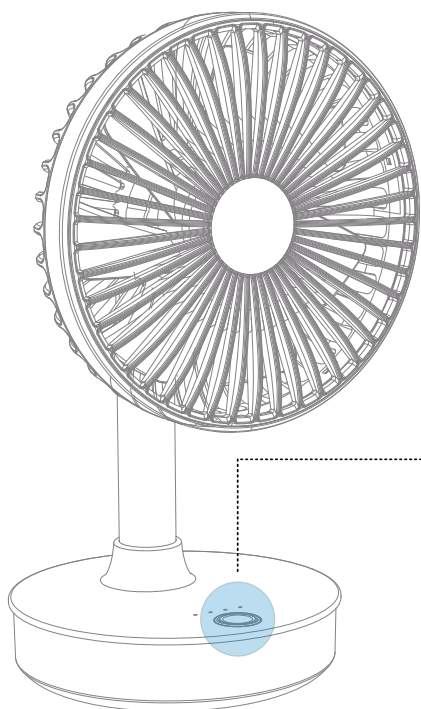



Operation instructions

If the device is charged, press the power button to turn it on. Please refer to the table below for details on each mode.

● ○ ○ ○	Push power button once	One LED lights up	Minimum wind speed
● ● ○ ○	Push button once more	Two LEDs light up	Second level wind speed
● ● ● ○	Push button once more	Three LEDs light up	Third level wind speed
● ● ● ●	Push button once more	Four LEDs light up	Maximum wind speed
Hold button for 2 seconds		Turn off	

Oscillation mode

After turning on the device, double press the power button to turn the left/right oscillation mode on or off.

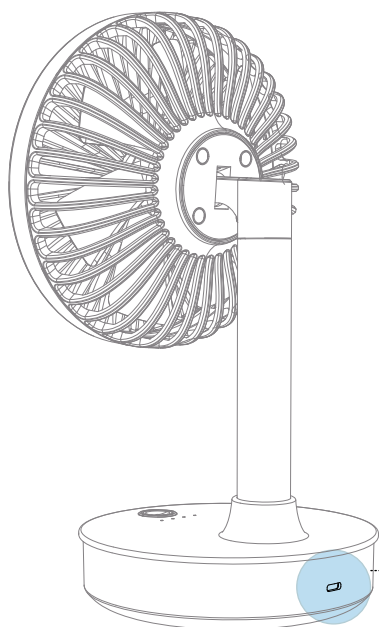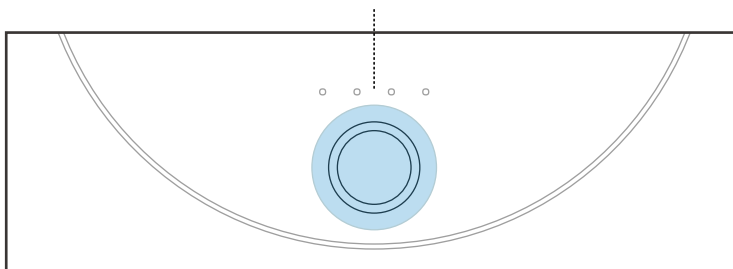

Low Battery Alarm

When the product is in use, the charging indicator lights up with a white LED. When the battery is low, the indicator flashes for 1 minute and then the power turns off. If you press the power button again, the indicator flashes for 3 seconds and then the power turns off again. Please charge the product as soon as possible.



Input

With the USB Type-C charging port, connect an external power source to the device's input port to start charging. During charging, the indicator LED flashes slowly and stays on when the battery is fully charged.

Installation and disassembly



Step 1

Check the alignment marks. When the upper and lower indicator lines form a straight line, the device is locked. These lines are shown both to the left and below the illustrations.

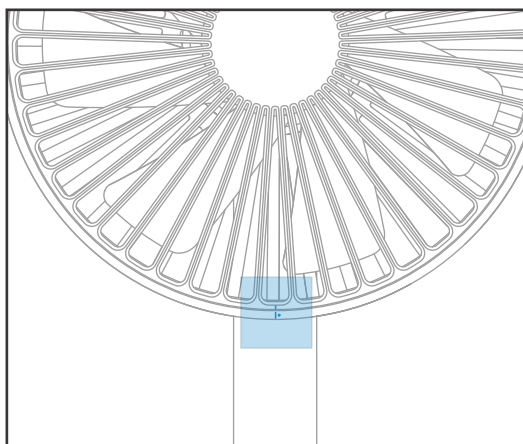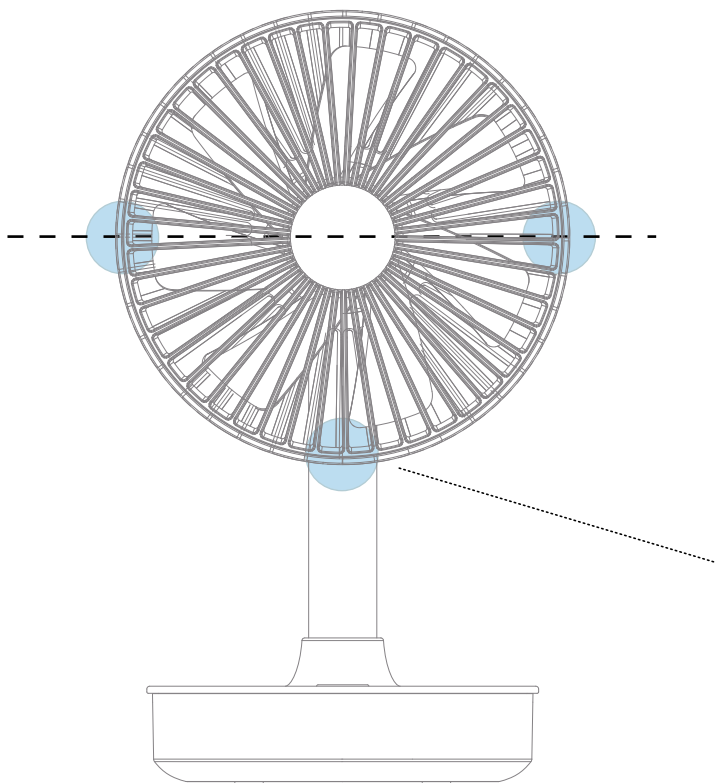

Step 2

Grab the rim of the safety grille and rotate it counterclockwise to unlock and remove it.

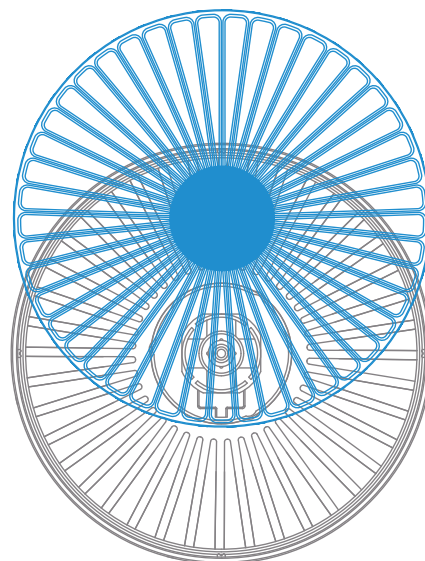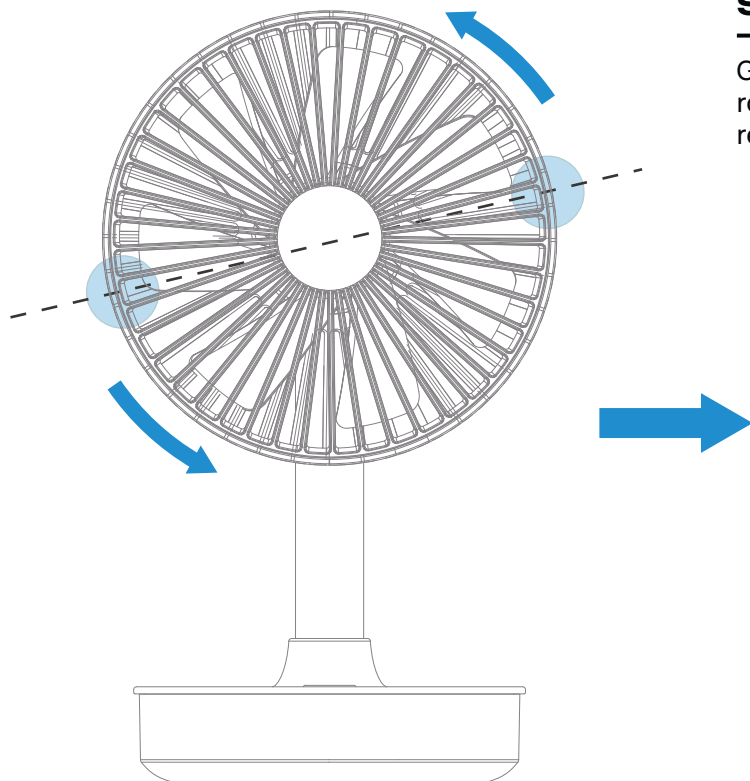


Cleaning and angle adjustment

Cleaning



The safety grille is washable. After washing, dry it thoroughly and reassemble it to prevent water from reaching the internal electronics.

The fan and/or blades must not be washed with water. After removing them, wipe them with a dry towel.

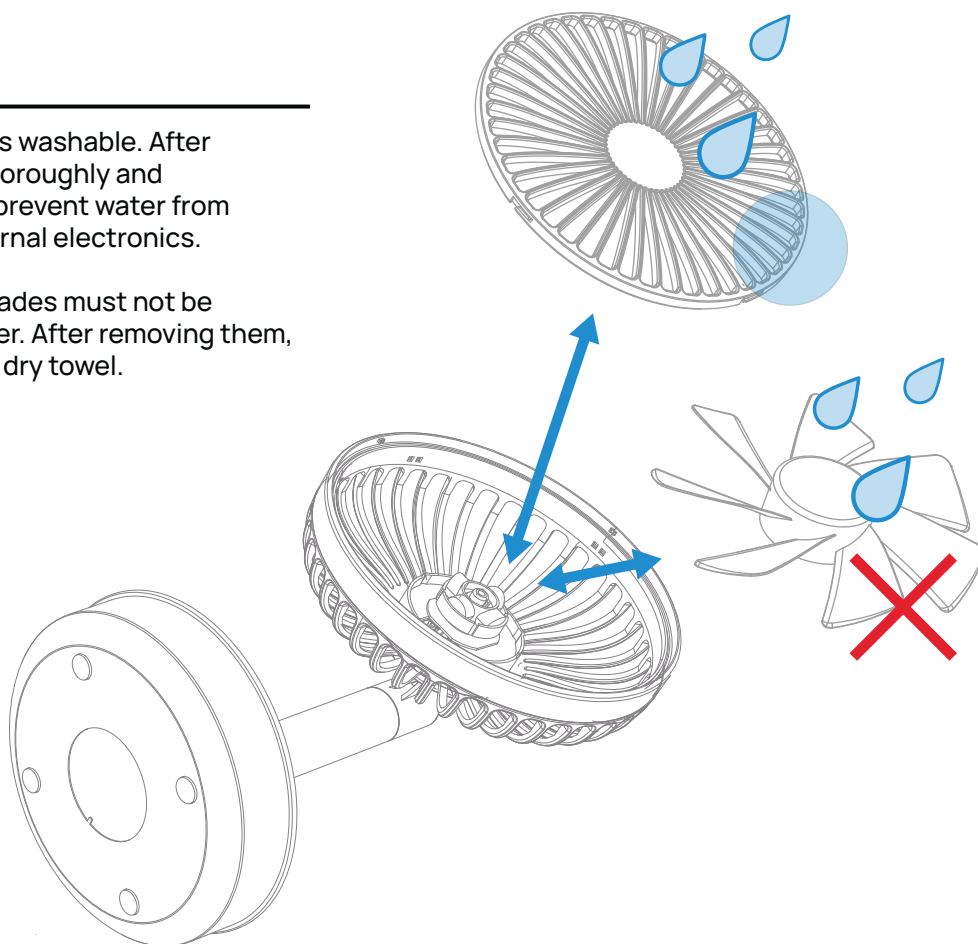

Angle adjustment

The fan head can be adjusted up and down. Double press the button to enter left and right oscillation mode.

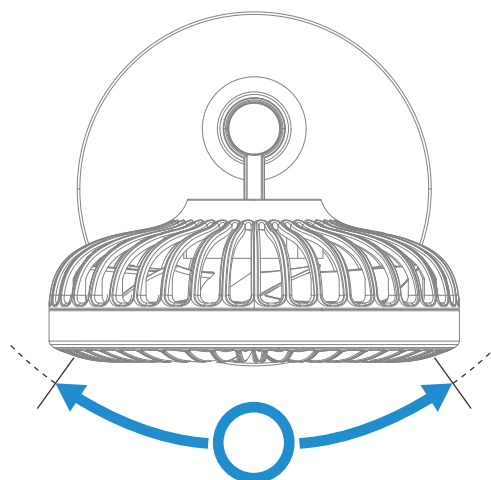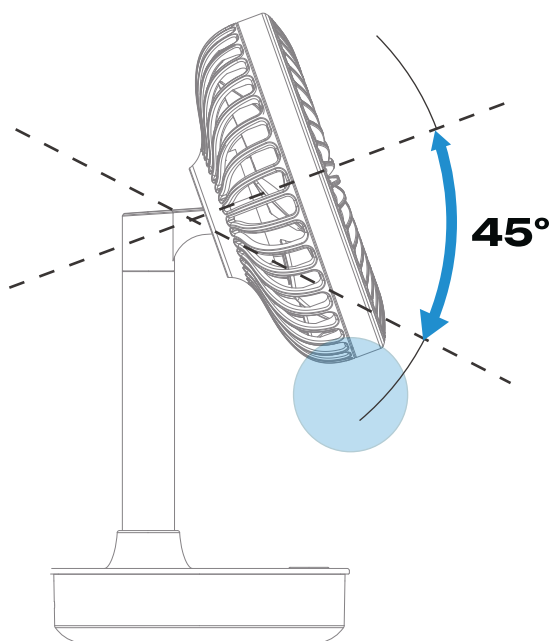

Safety Instructions

- Children aged 12 and under must not use this product without supervision.
- Keep the fan out of reach of small children and pets during use.
- Do not use or charge the device if the voltage does not match the specified requirements.
- Use only the supplied or recommended charging cable and power source.
- Disconnect the power supply after charging. Do not charge the device for longer than 12 hours.
- Make sure the safety grille and fan blades are completely dry after cleaning before use.
- Do not immerse the product in water or expose it to rain or moisture.
- Do not drop, hit or apply strong force to the product. Repeated impact may cause internal damage.
- Avoid contact with corrosive or flammable liquids.
- Do not insert fingers or objects into the fan while it is operating.
- Do not use hard, sharp or pointed objects on the safety grille or fan blades.
- Use this product at room temperatures between 10 and 40°C. Avoid direct sunlight, high temperatures and high humidity.
- Do not use or store the product near heat sources such as heaters or open flames.
- Do not charge or place the product on flammable materials such as sofas, beds or quilts.
- If the product becomes unusually hot, emits a smell or makes abnormal noise, stop using it immediately and contact customer service.
- Do not disassemble or repair this product yourself. For repairs, contact after sales service.
- Dispose of the product and battery in accordance with local regulations.

Package contents

Check the packaging for the following items:

- 1x Portable Table Fan
- 1x USB-C power cable
- 1x Manual

Specifications

Product name: XCelsius® Table Fan

Product models: XC-COOL-TF-W1

Rated input: 5V $\equiv$ 1.8A

Battery capacity: 3.7V $\equiv$ 4000mAh (14.8Wh) Lithium-ion Battery

Charging time: < 4 hours

Input interface: USB Type-C

Product material: ABS

Product weight: 520g

Product dimensions: 160 x 276 x 138 mm



Steps to remove the battery before disposing

Turn off the fan. → Remove the cover by unscrewing the screws. → Disconnect the battery power cable and remove the battery.

- Before disposing of the appliance, the battery must be removed.
- Make sure the appliance is powered off before removing the battery.
- Dispose of the battery safely in accordance with local regulations.

Product Maintenance

- Please charge the product for more than 4 hours before first use.
- Use the fan regularly and recharge it at least once every two months to prevent battery damage.



Warranty

Scan the QR code below to view the warranty coverage for our products.



Brand Heroes
Randstad 22 1
1316 BX Almere
The Netherlands
contact@xcelsius.eu

Designed by XCelsius®
Made In PRC