



built to handle any moment

XCelsius® Mini Fan

XC-COOL-MF-W1 / XC-COOL-MF-B1

EN

Quick Start Guide



Full manual

This guide shows you how to use this product.
Scan the QR code for the full manual.


Safety Instructions

- This product uses lithium-ion batteries without memory effect. The battery does not need to be fully discharged before charging. Charging regularly helps extend its lifespan.
- Do not put your fingers in the fan blades to avoid injury or damage. This product is not a toy. Children under 14 may only use it under adult supervision.
- Do not use the product in environments with flammable materials or strong electromagnetic radiation.
- Do not expose the product to fire, as this may cause fire or explosion.
- Do not disassemble the product without authorization.
- Do not aim the airflow at the body for long periods, especially with the elderly and children, to avoid discomfort.
- Do not block the air outlet or air inlet, for example with clothing, towels or other objects, as this may cause malfunctions.
- When using a power adapter, the input voltage and current must be 5V $\equiv$ 1A and the adapter must comply with national safety requirements.
- In case of smoke, fire or malfunction, switch off the device immediately, stop using it and send the product to the manufacturer for service. Do not disassemble the product yourself.
- Do not bend or pull the power cord during use to prevent poor contact or damage.

Package Contents


Check that the following items are included in the package:

- 1x Portable Mini Fan
- 1x USB-C charging cable
- 1x Manual

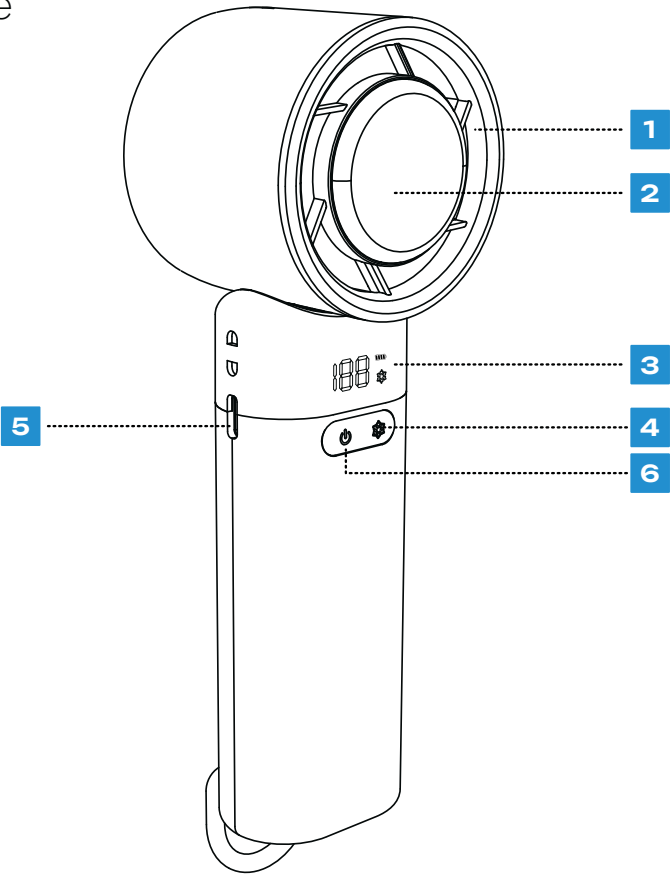

Parts Overview

- | | | |
|-------------------------|-----------------------|-----------------------|
| 1 Air outlet | 2 Cooling area | 3 Display |
| 4 Cooling button | 5 USB-C port | 6 Power button |

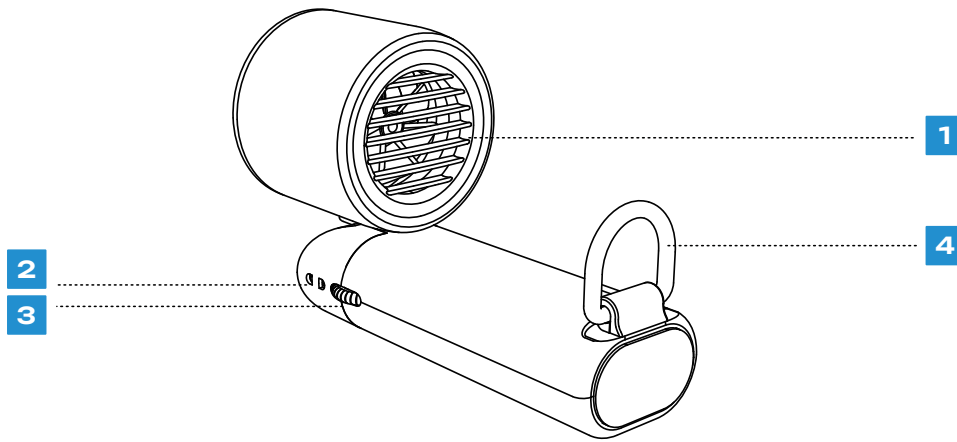

Parts Overview (Folded)

- | | | | |
|--------------------|-----------------------|--------------------------|-----------------|
| 1 Air inlet | 2 Cord opening | 3 Adjustment dial | 4 D-hook |
|--------------------|-----------------------|--------------------------|-----------------|

Folding Instructions

The handle and head of the fan can be folded along the axis so that the fan can stand upright on a desk.

Hanging Hook

The fan can be hung up and carried using the hanging hook.

Charging Instructions

- Step 1: Insert the charging cable into the Type-C port. While charging, the green icon  flashes slowly. When fully charged, the icon  stays on.
- Step 2: When the battery is low, the green icon  flashes quickly until the device switches off.
- Step 3: If the green icon  flashes quickly and the device will not turn on, the battery is empty.

Operation

Standby function

- Press and hold the power button to activate standby.
The display shows --.
(If no operation occurs for two minutes, the product switches off automatically.)
- When a function is active, you can press and hold the power button to switch off the product.

Fan function

- After the product is switched on and in standby, press the side button once to start the fan.
The display shows 01 and the fan starts at speed 1.
- Turn the knob up one step to increase the speed by one level, for example from 01 to 02.
- Turn the knob down one step to decrease the speed by one level, for example from 100 to 99.
- Keep turning up to increase the speed further, for example from 01 to 100.
- Keep turning down to decrease the speed further, for example from 100 to --.

Cooling function

- After the product is switched on and in standby, briefly press the cooling button to activate the cooling function. The display shows , and the snowflake icon  lights up.

(When cooling is active, the fan speed can be at most 50.)

- Press the cooling button again to switch off the cooling function.

Battery check

- After the product is switched on and in standby, briefly press the power button to check the remaining battery level.

Product maintenance

- Charge the product for at least 2 hours before first use.
- Use the fan regularly and charge it at least once every two months to prevent battery damage.

Removing the battery before disposing of the device

Switch off the fan → remove the housing by undoing the screws → disconnect the battery cable and remove the battery.

- Remove the battery before disposing of the device.
- Make sure the device is switched off before removing the battery.
- Dispose of the battery according to local regulations.

Specifications

Product name: XCelsius® Mini Fan

Models: XC-COOL-MF-W1 / XC-COOL-MF-B1

Input: 5V  1A

Battery: 3.7V  1A 3000mAh (11.1Wh) Lithium battery

Charging time: < 4 hours

Connection: USB-C

Material: ABS

Weight: 212g

Dimensions: 58 x 53 x 171mm



Warranty

Scan the QR code below to view the warranty for our products.



Brand Heroes
Randstad 22 12
1316 BX Almere
The Netherlands
contact@xcelsius.eu

Designed by XCelsius®
Made In PRC



NL

**Nederlands
Handleiding**



FR

**Manuel
français**